

# Line Type and Line Config

17/09/2024 5:07 pm BST

Line config is a group of work centres, typically planned together, to execute a sequence of work. Line type is the parent group of line configs. You need to create a line type before you can create a line config.

Line config is a high-level subdivision of the system. For example, to distinguish between two factories, or different product lines or fundamentally different processes in the system.

## Add/edit a line type

1. Navigate to the **Line Config** page.
2. Click the **Manage Line Types** button to display the **Line Types** popup.
3. Click the **New** button, provide a name for the line type, and click save.

## Add/edit line config

1. Navigate to the Line Config screen.
2. Click the New button to display the Add Line Config input screen.
3. Complete the **Add Line Config** input screen.

### Add/Edit Line Config input screen

The following properties can be defined for Add/Edit Line Config:

*Blue fields in the form are required and are flagged with an asterisk (\*) in this document.*

- **Line Type\***: Select a line type.
  - SUID
  - **Name\***: Name of the line config.
  - **Description**: Description of the line config.
  - **Job Sort Mode\***: Influences the default sort order for jobs on the workstation.
-